

Wireless Smoke Alarm CL -S-GS558D User Manual

Thank you for purchasing our wireless smoke alarm with heat detection. Please take a few minutes to read the user manual thoroughly and familiarise yourself and your family with its operation. And save it for future reference.



Product Specifications:

- **Power:** DC2*1.5V AA battery
- **Operation Current:** <6uA (standby), <1200mA (alarm)
- **Alarm Volume:** >85dB(A) at 3 meters.
- **Smoke Sensitivity:** 0.108-0.141dB/m
- **Heat sensitivity:** 54-70°C
- **Local smoke alarm sound pattern: ISO8201**
BI 0.5s - pause 0.5s – BI 0.5s – pause 0.5s – BI 0.5s – pause 1.5s, with the red LED flash, repeat this alarm pattern.
- **Local heat alarm sound pattern:**
BI 0.2s - pause 0.1s, with the red LED flash, repeat this alarm pattern.
- **Complies to Australian standard AS3786:2014**

Description:

The unit is a photoelectric 3V DC smoke alarm. It is operated by 3v AA battery. With the photoelectric technology, it is more sensitive to detecting slow smouldering fires with general thick, black smoke, little heat and may smoulder for hours before bursting into flames. The smoke alarm does not contain the radioactive material which is harmful to the environment. The smoke alarm should be installed in every room (except the bathroom), and every other area of the home, making sure the people in the home will be able to hear and respond to the alarm sound. For minimum protection you should fit an alarm in the hallway between the living areas and sleeping areas. Place the unit near to the living areas as close as practicable and ensure the alarm is audible when the bedrooms are occupied.

Typical single storey dwelling recommendation: Install a smoke alarm on the ceiling inside each bedroom and in the hallway outside each separate sleeping area. If a bedroom area hallway is more than 30 feet long, install a smoke alarm at each end. If there is a basement, install a smoke alarm on the basement ceiling at the bottom of the stairwell.

Typical multi-storey dwelling recommendation: Install a smoke alarm on the ceiling inside each bedroom and in the hallway outside each separate sleeping area. If a bedroom area hallway is more than 30 feet long, install a smoke alarm at each end install a smoke alarm at the top of a first – to- second floor stairwell.

Important Safety Information:

- 1: The test button accurately tests smoke alarm functions. Do not use any other test method. Test smoke alarm weekly to ensure proper operation.
- 2: Do not remove or disconnect battery. This will take out your protection. Open windows or fan the air around smoke alarm to silence it.
- 3: Observe and follow all local and national electrical and building codes for installation.
- 4: This smoke alarm is designed to be used inside a single home only. In multifamily buildings such as apartment/unit complex, each individual living unit should have its own smoke alarms. Do not install in non-residential buildings. And this smoke alarm is not a substitute for a complete alarm system.
- 5: Install a smoke alarm in every room and on every level of the home. Smoke may not reach the smoke alarm for many reasons. For example, if a fire starts in a remote part of the home, on another level, in a chimney, wall, roof, or on the other side of a closed door, smoke may not reach the smoke alarm in time to alert household members. A smoke alarm will not promptly detect a fire except in the area or room in which it is installed.
- 6: Smoke alarm may not alert every household member every time. The alarm horn is loud in order to alert individuals to a potential danger. However, there may be some circumstances where a household member may not hear the alarm (i.e. outdoor or indoor noise, sound sleepers, drug or alcohol usage, the hard of hearing, etc.). If you suspect that this smoke alarm may not alert a household member, install and maintain specialty smoke alarms. Household member must hear the alarm’s warning sound and quickly respond to it to reduce the risk of damage, injury, or death that may result from fire. If a household member is hard of hearing, install special smoke alarms with lights or vibrating devices to alert occupants.
- 7: Smoke alarms can only sound their alarms when they detect smoke or detect combustion particles in the air. They do not sense flame, or gas. This smoke alarm is designed to give audible warning of a developing fire. However, many fires are fast - burning, explosive, or intentional, and others are caused by carelessness or safety hazards. In such circumstances, smoke may not make it to the alarm **QUICKLY ENOUGH** to ensure safe escape.
- 8: Smoke alarms have limitations. This smoke alarm is not foolproof and is not warranted to protect lives or property from fire. Smoke alarms are not a substitute for insurance. Homeowners and renters should insure their lives and property. In addition, it is possible for the smoke alarm to fail at any time. For this reason, you must test the smoke alarm weekly and replace unit every 10 years.

Do Not Install Smoke Alarms in the Following Places:

- 1: Near appliances or areas where normal combustion Regularly occurs (kitchens, near furnaces, hot water heaters). Use specialized smoke alarm with unwanted alarm control in these areas.
- 2: In areas with high humidity, like bathrooms or areas near dishwashers or washing machines. Install at least 10 feet away from these areas.
- 3: Near air returns or heating and cooling supply vents. Install at least 3 feet away from these areas. The air could blow smoke away from the detector, interrupting its alarm.
- 4: In rooms where temperatures may fall below 0°C or rise above 40°C.
- 5: In extremely dusty, dirty, or insect – infested areas influence particles interfere with smoke alarm operation.

Battery Specification:

Rating voltage: DC 1.5V
Package: AA battery
Recommend battery:
Energize: E91; Gold Peak Group: GP 15A LR6; Raymax : LR6; Pairdeer: FR6

Replace Battery:

- 1: Turn the alarm body counter-clockwise and take out the alarm body from the bracket.
- 2: Take out the old battery from the battery box.
- 3: Fit the two new batteries to the battery box. Please note the battery polarity.
- 4: Fit alarm body on bracket and turn the alarm body clockwise.
- 5: Test smoke alarm using test button. The sound pattern is 3 short beeps1.5seconds pause, repeat. If there is no sound output, it means that the smoke alarm is faulty, or the battery installation is incorrect. For further information please review the TROUBLE SHOOTING section of this manual.

LED indicator

- 1: When the alarm is running normally, the red LED will flash 1 time per 40 seconds.
 - 2: When low battery is detected, the alarm will “chirp” 1 time with a corresponding red LED flash, 1 time per 40 seconds.
 - 3: When the unit is faulty, it will “chirp” once per 40 seconds.
 - 4: When the unit is running in silent mode, the red LED will flash once every 8 seconds.
- Note:** When the units chirp 1 time per 40 seconds, Press the test button, it will be paused for this warning tone for 8 hours. It can still normally detect smoke during this period, it only removes nuisance warning tone.

Alarm silence (silence mode)

When the unit is alarming, push the test button, it will pause the unit from alarming for approx 10 minutes. The red LED will flash once every 8 seconds, it indicates the smoke alarm is running in the silent mode. Smoke alarms are designed to minimize nuisance alarms. Combustion particles from cooking may set off the alarm if the alarm is located close to the cooking area. Large quantities of combustible particles are generated from spills or when grilling/frying. Using the fan on a range hood that vents to outside (nonrecirculating type) will also help remove these combustible particles from the kitchen. The alarm silence (test button) is extremely useful in a kitchen area or other areas prone to nuisance alarms. The silence feature is to be used only when a known alarm condition, such as smoke from cooking activates the alarm. The smoke alarm will automatically reset after approximately 10 minutes, if after this period, particles of combustion are still present, the alarm will sound again. The alarm silencer (silence mode) can be repeated until the air has been cleared of the condition causing the alarm.

Testing the Smoke Alarm:

- Test each smoke alarm to be sure it is installed correctly and operating properly.
- 1: Do not use an open flame to test the alarm. You may ignite and damage the alarm or your home.
 - 2: Test the alarms weekly and upon return from vacation or when no one has been at home for several days.

Clever Sense – Smoke Alarm	Rev. A.1	Date: 06 May 2020
----------------------------	----------	-------------------

- 3: Stand at an arm’s length from the unit when testing.
Test all smoke alarms weekly by doing the following step.
- 4: Firmly press the test button for at least 5 seconds. The alarm will sound 3 short beeps – 1.5 seconds pause, then repeat until the button is released. The alarm may sound for several seconds after releasing the test button.
Note: When multiple alarms are installed and connected during testing, the other smoke detectors will alarm. Once the button is released, the other smoke detectors will stop alarming in 1 minute. This is to test the wireless function between alarms.
DANGER: If the alarm sounds, and it is not being tested, it means the unit is sensing smoke, **THE SOUND OF THE ALARM REQUIRES YOUR IMMEDIATE ATTENTION AND ACTION.**

Wireless function description:

- Wireless frequency: 2.4GHz
Wireless transmission current: < 450mA
Wireless distance: >30 meters
- Setting up with SmartLife APP** – Ensure mobile device is connected to Wi-Fi network. Download and register with APP in App Store and Google Play or via the below QR codes
- a: Open the Smart Life APP, Click ‘+’ symbol in top left corner, select ‘Security & Sensor’ from left side menu, select ‘Smoke Detector (Wi-Fi) and follow the on-screen instructions to pair with network
- b: With Smoke Alarm in standby mode, Press the button three times in 2 seconds. The smoke LED is turned on indicating it is connecting to the network
- c: The APP will display ‘Device Added Successfully’ click Done.
- Note: repeat the same process with all the alarms you have on hand.



Smart Life



Clever Life
(Clever Life App coming soon)

Maintenance and Cleaning:

In addition to weekly testing, the alarm requires periodic cleaning to remove dust, dirt, and debris.
Clean the alarm at least once a month to remove dust, dirt, or debris. Use a vacuum cleaner with the soft brush, vacuum all sides and covers of smoke alarm. Be sure all the vents are free of debris.
IMPORTANT: Do not attempt to remove the cover to clean inside. This will affect warranty.
WARNING! Use only the batteries specified. Using different batteries may have detrimental effects to the alarm. A good safety measure is to replace the battery at least once a year.
Note: Reinstall immediately after cleaning and then test unit using the test button.

Repair:

Caution: Do not attempt to repair the alarm. It will affect your warranty. If the alarm is not operating properly, and is still under warranty, return it to the original place of purchase. Alternatively contact us at www.cleverlife.com.au
If the alarm is no longer under warranty, have a suitably qualified technician replace it immediately with a comparable alarm.

Practice Fire Safety:

If the alarm sounds, and you have not pushed the test button, it is warning of a dangerous situation, your immediate response is necessary. To prepare for such occurrences, develop family escape plans, discuss them with all household members, and practice them regularly.

- 1: Expose everyone to the sound of a smoke alarm and explain what the sound means.
- 2: Determine two exits from each room and an escape route to the outside from each exit.
- 3: Teach all household members to touch the door and use an alternate exit when the door is hot, instruct them not to open the door if the door is hot.
- 4: Teach household members to crawl along the floor to stay below dangerous smoke, fumes and gases.
- 5: Determine a safe meeting place for all members outside the building.

What to Do in Case of Fire:

- 1: Do not panic; stay calm.
- 2: Leave the building as quickly as possible. Touch doors to feel if they are hot before opening them. Use an alternate exit if necessary. Crawl along the floor, and do not stop to collect anything.
- 3: Meet at a pre-arranged meeting place outside the building.
- 4: Call the fire department from outside the building.
- 5: Do not go back inside a burning building. Wait for the fire department to arrive.

Note: These guidelines will assist you in the event of a fire, however, to reduce the chance that fires will start, practice fire safety rules and prevent hazardous situations.

Trouble shooting:

DO NOT disconnect battery to quiet an unwanted alarm. This will remove your protection. Fan the air or open a window to remove smoke or dust.

Problem	Method of disposal
Smoke alarm does not sound when tested.	<ol style="list-style-type: none"> 1: Remove smoke alarm from bracket. then Check the battery is properly connected to battery connector. 2: Replace the battery. 3: Replace the unit.
Smoke alarm beeps with the red LED flash one time per 40 seconds.	Replace battery, please refer to "REPLACE BATTERY" section.
The alarm sounds different from it is used to. It starts and stops.	<ol style="list-style-type: none"> 1: This alarm is operating correctly. 2: Clean smoke alarm. Please refer to the "maintenance and cleaning" section.

Warranty Information:

Clever Life warrants to the original consumer. Each smoke alarm is warranted to be free from defects in material and workmanship under normal use and service for a period of 3 years from the date of purchase. This warranty does not cover damage resulting from accident, misuse or abuse or lack of reasonable care of the product. In no case shall Clever Life be liable for any incidental or

consequential damages for breach of this or any other warranty express or implied, whatsoever. For faulty products please contact us at www.cleverlife.com.au

Optimal Installation Location:

- At first you need to install one unit in the bedroom and route way. If you have several bedrooms install 1 smoke alarm p/bedroom.
- Install it in the stairway and in every floor. Smoke, heat and burning material will spread horizontally after rising to the ceiling, so install the alarm in the middle of the ceiling of ordinary structure house.
- If the alarm couldn't be installed in the middle of the ceiling for any reason, the distance which the alarm is away from the wall or corner should be beyond 50cm. (see the diagram 1).
- If the length of the room or the hall is beyond 30 foot, you should install several alarms in the hall.
- If installing on a sloped ceiling, the alarm needs to be installed 500mm away from the highest ceiling point in the room (see the diagram 2).

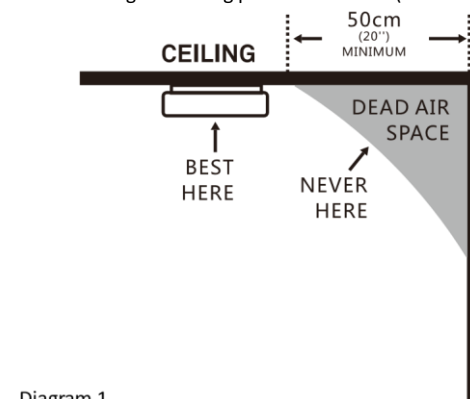


Diagram 1


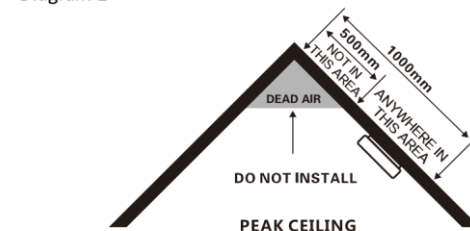


Diagram 2

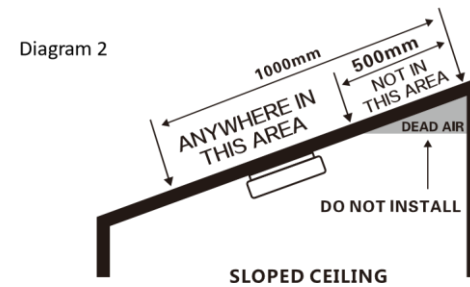

Installation:

- Fix the two AA batteries to each battery box of the smoke alarm.
- According to the **"Wireless function description"** Section to operate the smoke alarm. Ensure the wireless function is ok. Hold the bracket

in the required installation position, mark installation holes of bracket with a pencil.

- For installation into concrete or masonry - Drill two 5mm holes using an electric drill deep enough to fit the provided plastic plug. Press the two plastic plugs into holes using a hammer. Attach the bracket to the plastic plugs and fix using the screws (3*25mm) into the plastic plugs. (refer to Diagram 3). If installing into timber or plasterboard, the plastic plugs are not required and mounting can be direct with the screws.
- Fit the alarm on the bracket and turn the alarm body clockwise, until the alarm has 'clicked' into place.
- Test smoke alarm using test button. The alarm will sound 3 short beeps – 1.5 seconds pause, then repeat until the button is released. If no sound is heard, this indicates a defective alarm, you can refer to "Trouble shooting" for solutions or return to your retailer during warranty.
- If you have any questions on installation, you can contact your retailer or visit www.cleverlife.com.au

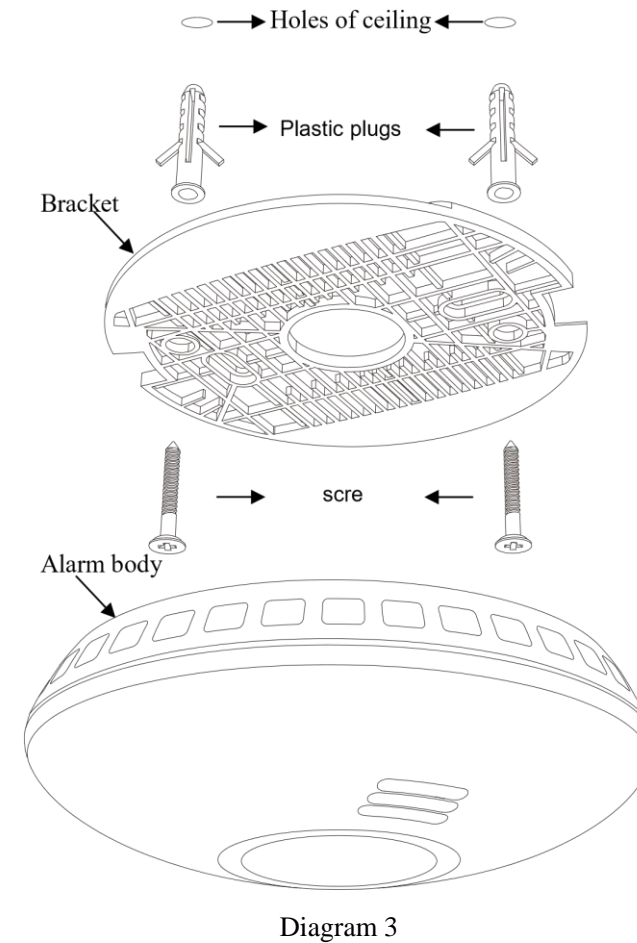


Diagram 3

Note: During testing, other connected smoke detectors will alarm. Once the button is released other smoke detectors will stop alarming in 1 minute. This is to test the wireless function between alarms.

WARNING:

To prevent injury, this unit must be securely attached to the ceiling in accordance with the installation instructions.

For further information visit www.cleverlife.com.au

Life's better when its **C L E V E R**

Manufacturer
SITERWELL ELECTRONICS Co